



1867912

K-Morgan Storage Desk-Acorn
Parts and Hardware List

A.	Top Panel	1 pc
B.	Left Side Panel	1 pc
C.	Right Side Panel	1 pc
D.	Left Divider	1 pc
E.	Right Divider	1 pc
F.	Stretcher	1 pc
G.	Fixed Shelf	1 pc
H.	Bottom Panel	1 pc
I.	Back Panel	1 pc
J.	Feet	6 pcs
K.	Door	1 pc
L.	Keyboard Tray	1 pc
M.	Mouse Tray	1 pc
N.	Adjustable Shelves	2 pc
O.	Door Pull	1 pc
P.	Connecting Bolts	6 pcs
Q.	Eccentric Cams	6 pcs
R.	Plastic Caps	6 pcs
S.	Machine Screw	1 pc
T.	Flat Washers	16 pcs
U.	Lock Washers	16 pcs
V.	Confirmat Screws	6 pcs
W.	Flat Head Screws	4 pcs
X.	Pan Head Screws	16 pcs
Y.	Allen Head Bolts	16 pcs
Z.	Shelf Supports	8 pcs
ZA.	Allen Head Wrench	1 pc
ZB.	Phillips Head Screwdriver	1 pc
ZC.	Flat Head Screwdriver	1 pc



1867912


K-Morgan Storage Desk-Acorn

- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * Use the hardware illustrations to determine correct piece and size.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.


Hardware Illustrations




P. Connecting Bolt

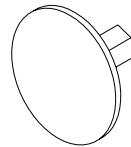

R. Plastic Cap

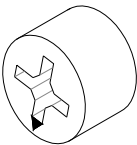


Q. Eccentric Cam




S. Machine Screw




X. Pan Head Screw




W. Flat Head Screw



V. Confirmat Screw




Y. Allen Head Bolt



T. Flat Washer



U. Lock Washer

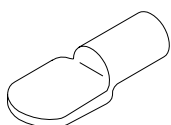

Z. Shelf Support



O. Door Pull



1867912

K-Morgan Storage Desk-Acorn

Attach Right Divider & Left Side Panel with Top

Parts required

A.	Top Panel	1 pc	U.	Lock Washers	2 pcs
B.	Left Side Panel	1 pc	Q.	Eccentric Cams	6 pcs
E	Right Divider	1 pc	R.	Plastic Caps	6 pcs
F.	Stretcher	1 pc	Y.	Allen Head Bolts	2 pcs
P.	Connecting Bolts	6 pcs	ZA.	Allen Head Wrench	1 pc
T.	Flat Washers	2 pcs	ZC.	Flat Head Screwdriver	1 pcs

1. **Insert Connecting Bolts (P)** Insert the Connecting Bolts (P) into the pre-threaded holes in Top Panel (A), Left Side Panel (B), and Right Divider (E) and secure by using Flat Head Screwdriver (ZC). See Illustration #1.
2. **Attach the Stretcher (F)** Align the pre-drilled holes in the Stretcher (F) with Connecting Bolts (P) in the Left Side Panel (B) and Right Divider (E). Insert the Eccentric Cams (Q) into the pre-drilled holes in Stretcher (F) making sure the 'X' pattern is facing out and the arrow points toward the pre-drilled hole in the edges of Stretcher (F). Use the Flat Head Screwdriver (ZC) to adjust the Eccentric Cams (Q) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover the Eccentric Cams (Q) with the Plastic Caps (R). See Illustration #1.
3. **Attach the Right Divider (E) & Left Side Panel (B)** Align the pre-drilled holes in the Right Divider (E) with Connecting Bolts (P) in the Top Panel (A). Insert the Eccentric Cams (Q) into the pre-drilled holes in Right Divider (E) making sure the 'X' pattern is facing out and the arrow points toward the pre-drilled hole in the edge of Right Divider (E). Use the Flat Head Screwdriver (ZC) to adjust the Eccentric Cams (Q) and lock the Connecting Bolts (P) in place by turning in a clockwise direction. Cover the Eccentric Cams (Q) with the Plastic Caps (R). Align the pre-threaded holes in the Left Side Panel (B) with pre-drilled holes in the Top Panel (A). Secure with Lock Washers (U), Flat Washers (T), & Allen Head Bolts (Y) by using Allen Head Wrench (ZA). See Illustration #1.

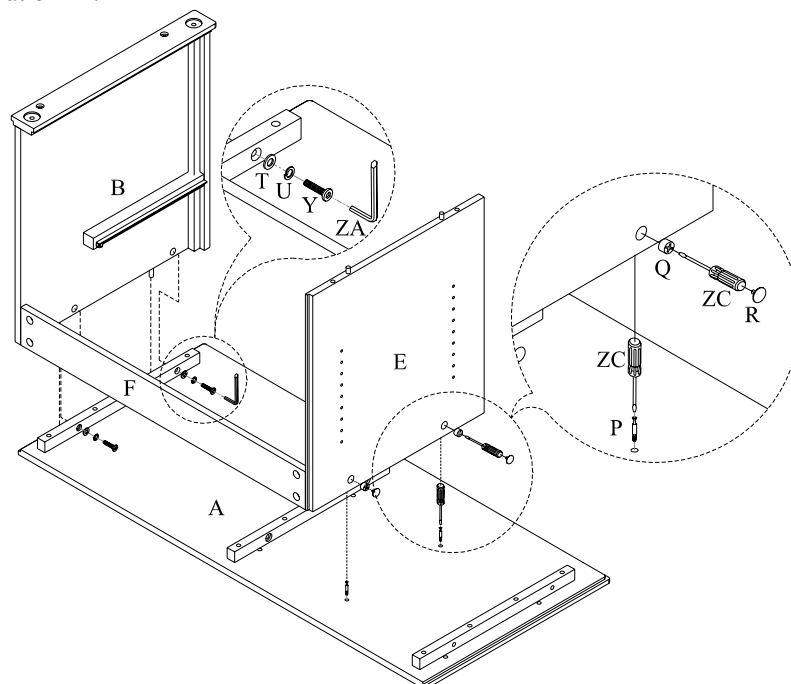


Illustration #1



1867912

K-Morgan Storage Desk-Acorn

Attach Right Side Panel and Left Divider

Parts required

C.	Right Side Panel	1 pc	U.	Lock Washers	4 pcs
D.	Left Divider	1 pc	Y.	Allen Head Bolts	4 pcs
T.	Flat Washers	4 pcs	ZA.	Allen Head Wrench	1 pc

4. **Attach Right Side Panel (C) and Left Divider (D)** Align the holes in the Top Panel (A) with pre-threaded holes in the Right Side Panel (C) and Left Divider (D). Secure with Lock Washers (U) , Flat Washers (T) , & Allen Head Bolts (Y) by using Allen Head Wrench (ZA) . See Illustration #2.

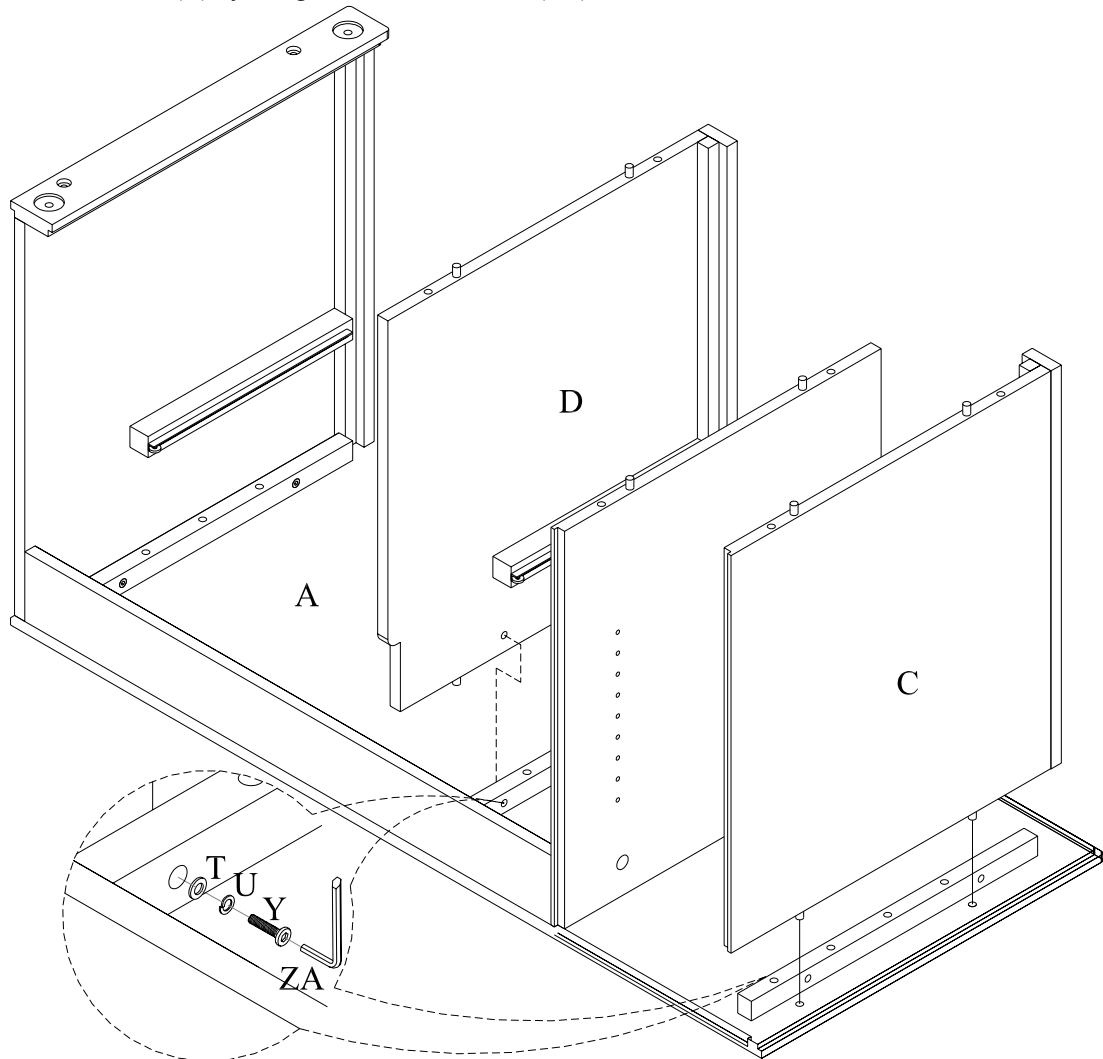


Illustration #2



1867912

K-Morgan Storage Desk-Acorn

Attach Fixed Shelf

Parts required

B.	Left Side Panel	1 pc	U.	Lock Washers	4 pcs
D.	Left Divider	1 pc	Y.	Allen Head Bolts	4 pcs
G.	Fixed Shelf	1 pc	ZA.	Allen Head Wrench	1 pc
T.	Flat Washers	4 pcs			

5. **Attach Fixed Shelf (G)** Align the holes in the Fixed Shelf (G) with pre-threaded holes in the Left Side Panel (B) and Left Divider (D). Secure with Lock Washers (U) , Flat Washers (T) , Allen Head Bolts (Y) by using Allen Head Wrench (ZA) . See Illustration #3.

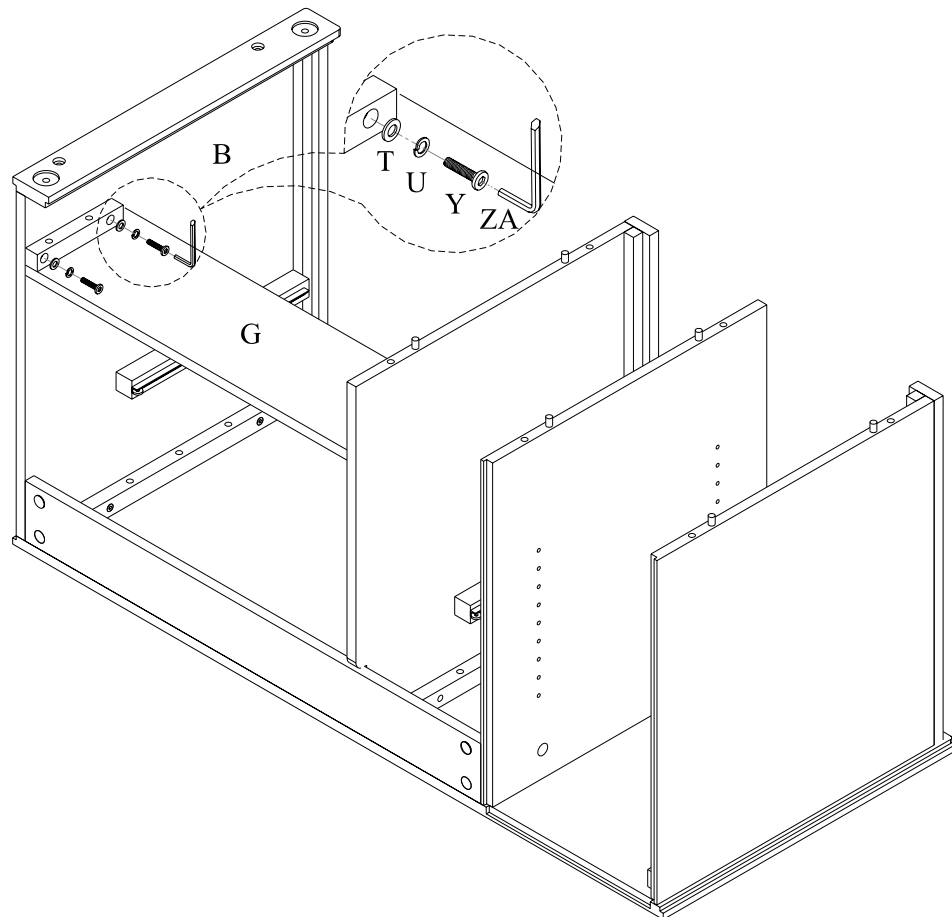


Illustration #3



1867912

K-Morgan Storage Desk-Acorn

Attach the Back Panel Bottom and Feet

Parts required

A.	Top Panel	1 pc	U.	Lock Washers	6 pcs
B.	Left Side Panel	1 pc	J.	Feet	6 pcs
C.	Right Side Panel	1 pc	V.	Confirmat Screws	6 pcs
D.	Left Divider	1 pc	X.	Pan Head Screws	16 pcs
H.	Bottom Panel	1 pc	ZA.	Allen Head Wrench	1 pc
I.	Back Panel	1 pc	ZB.	Phillips Head Screwdriver	1 pc
T.	Flat Washers	6 pcs			

6. **Attach Bottom Panel (H)** Align the holes in the Bottom Panel (H) with pre-drilled holes in the Left Divider (D), Right Divider (E), and Right Side Panel (C). Secure with Confirmat Screws (V), Lock Washers (U), & Flat Washers (T) by using Allen Head Wrench (ZA). Refer to Illustration #4.
7. **Attach the Back Panel (I)**. Place the Back Panel (I) into the notches in the back edge of the Left Divider (D), Right Side Panel (C), Bottom Panel (H), and Top Panel (A). Secure the Back Panel (I) with Pan Head Screws (X) by using Phillips Head Screwdriver (ZB). Refer to Illustration #4.
8. **Attach the Feet (J)**. Insert the exposed threads of the Feet (J) into the pre-threaded holes in the Bottom Panel (H) and Left Side Panel (B). Tighten by turning the Feet (J) in a clockwise direction. Refer to Illustration #4.



1867912
K-Morgan Storage Desk-Acorn

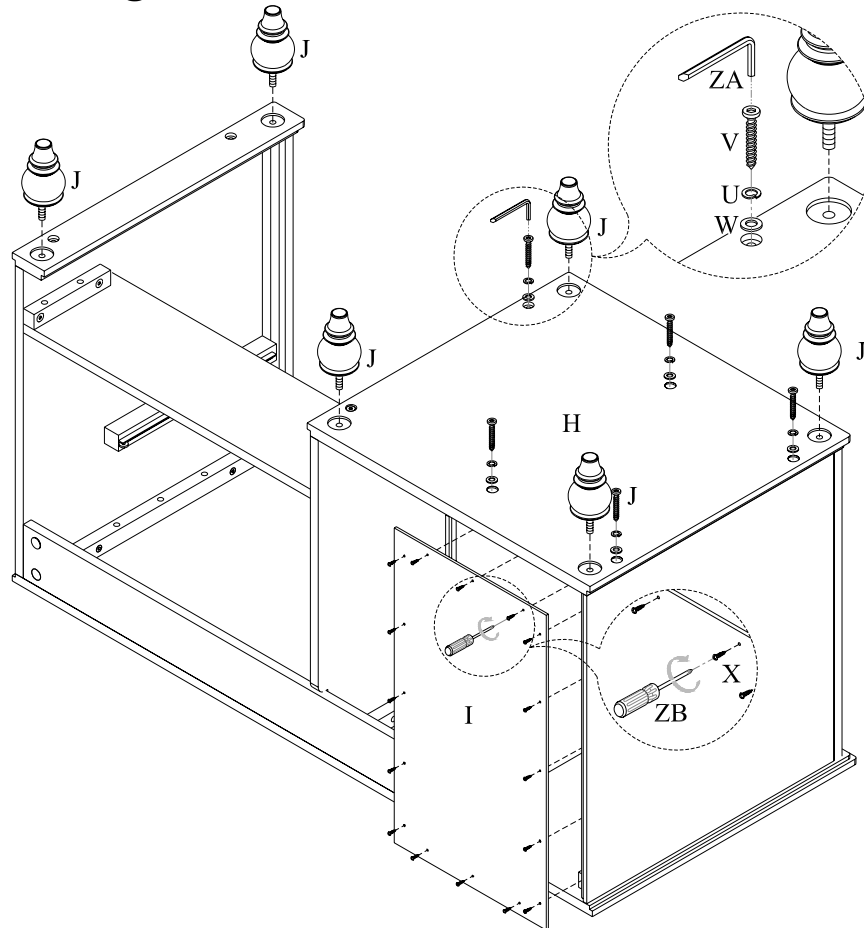


Illustration #4



1867912

K-Morgan Storage Desk-Acorn

Attach Door & Adjustable Shelves

Parts required

K.	Door	1 pc	Z.	Shelf Supports	8 pcs
N.	Adjustable Shelves	2 pcs	ZB.	Phillips Head Screwdriver	1 pc
W.	Flat Head Screws	4 pcs			

9. **Attach the Door (K).** Turn the desk upright. Align the holes in the hinges on the Door (K) with pre-drilled holes in the Right Side Panel (C). Insert the Flat Head Screws (W) through the holes in the hinges and secure into the Right Side Panel (C) by using the Phillips Head Screwdriver (ZB). See Illustration #5.
10. **Install Adjustable Shelves (N).** Insert the Shelf Supports (Z) into desired holes in the Right Side Panel (C) and Right Divider (E). Place the Adjustable Shelves (N) onto the Shelf Supports (Z). See Illustration #5.

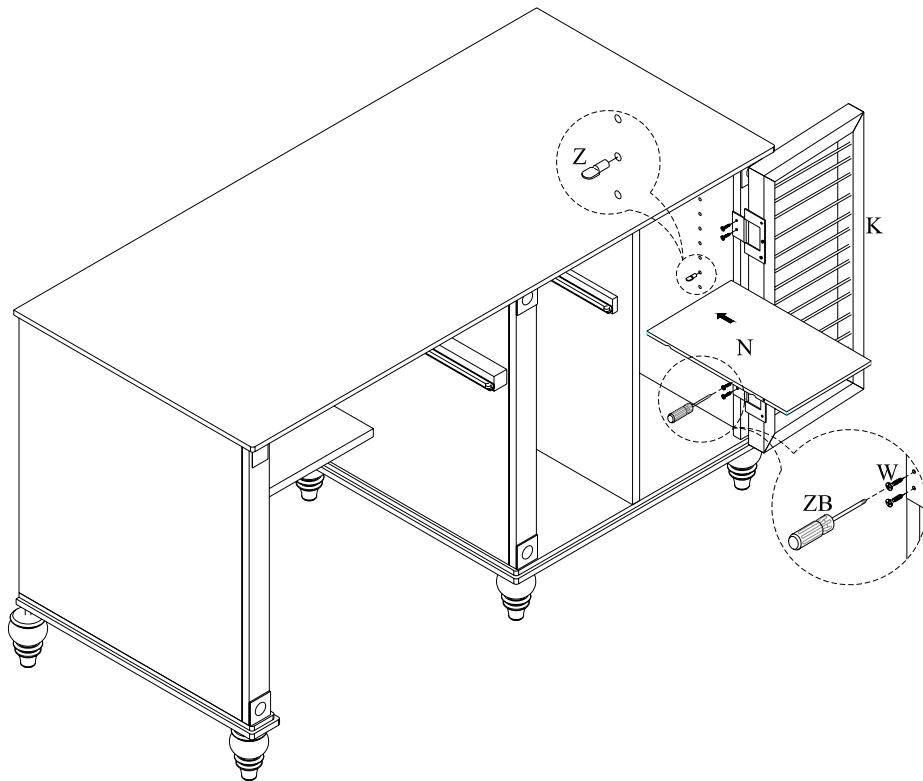


Illustration #5



1867912

K-Morgan Storage Desk-Acorn

Install Door Pull, Keyboard Tray, & Mouse Tray

Parts required

B.	Left Side Panel	1 pc	O.	Door Pull	1 pc
C.	Right Side Panel	1 pc	M.	Mouse Tray	1 pc
D.	Left Divider	1 pc	S.	Machine Screw	1 pc
E.	Right Divider	1 pc	ZB.	Phillips Head Screwdriver	1 pc
L.	Keyboard Tray	1 pc			

11. **Attach the Door Pull (O).** Insert the Machine Screw (S) through the hole in the Door (K) and secure into the pre-threaded holes in the Door Pull (O) by using Phillips Head Screwdriver (ZB). See Illustration #6.
12. **Install Keyboard Tray (L) and Mouse Tray (M).** Place the Mouse Tray (M) into the drawer glides on the Right Divider (E) and Left Divider (D). Place the Keyboard Tray (L) into the drawer glides on the Left Divider (D) and Left Side Panel (B). See Illustration #6.

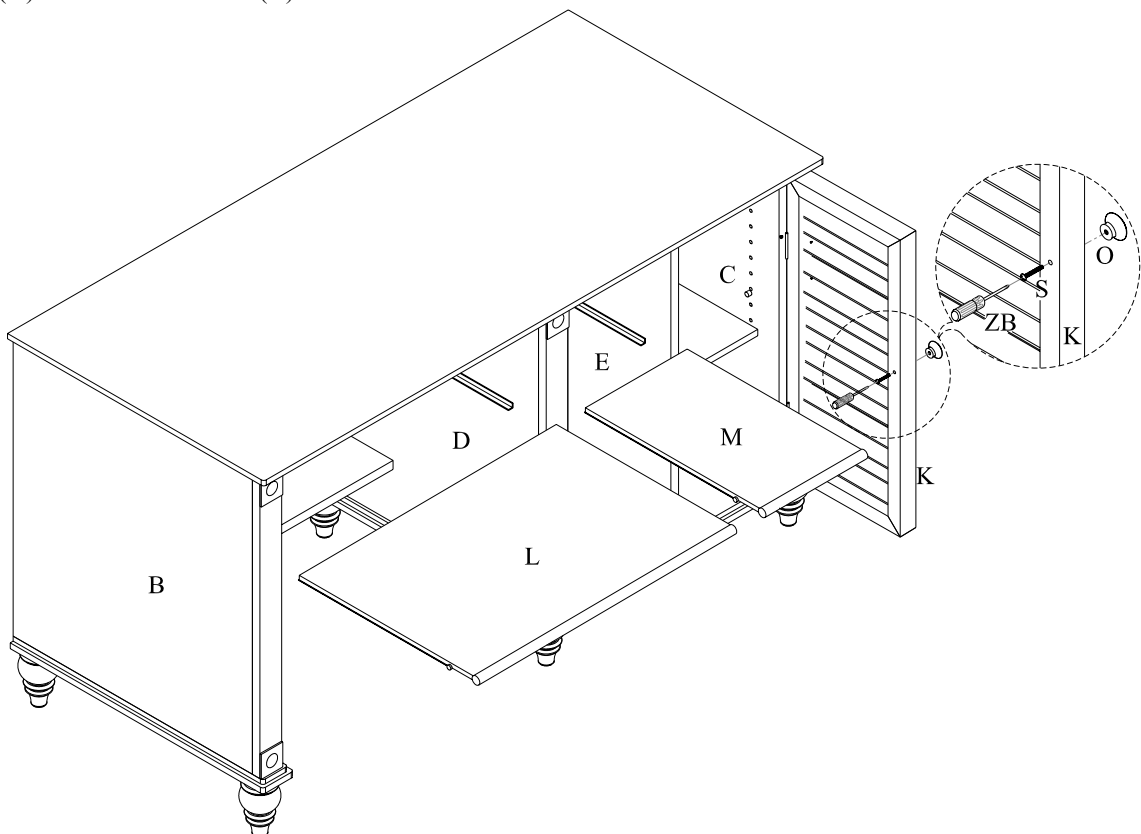


Illustration #6